

DMX	NO	Φ
ユニットNO		
負荷回路名		
ブレーカー容量		

富士川町ますほ文化ホール

2010/4設備
TEL 0556-22-8811

NO2 調光器盤

DMX	49	R	DMX	50	S	DMX	51	T	DMX	52	R	DMX	53	S	DMX	54	T	DMX	55	R	DMX	56	S
2-1-1			2-1-2			2-1-3			2-1-4			2-1-5			2-1-6			2-1-7			2-1-8		
3S9			3S10			3S11			3S12			CL1			CL2			CL3			CL4		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		

DMX	57	T	DMX	58	R	DMX	59	S	DMX	60	T	DMX	61	R	DMX	62	S	DMX	63	T	DMX	64	R
2-2-1			2-2-2			2-2-3			2-2-4			2-2-5			2-2-6			2-2-7			2-2-8		
CL5			CL6			CL7			CL8			CL9			CL10			CL11			CL12		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		

DMX	65	S	DMX	66	T	DMX	67	R	DMX	68	S	DMX	69	T	DMX	70	R	DMX	71	S	DMX	72	T
2-3-1			2-3-2			2-3-3			2-3-4			2-3-5			2-3-6			2-3-7			2-3-8		
CL13			CL14			CL15			CL16			FS上1			FS上2			FS上3			FS上4		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		

DMX	73	R	DMX	74	S	DMX	75	T	DMX	76	R	DMX	77	S	DMX	78	T	DMX	79	R	DMX	80	S
2-4-1			2-4-2			2-4-3			2-4-4			2-4-5			2-4-6			2-4-7			2-4-8		
FS上5			FST下1			FST下2			FST下3			FST下4			FST下5			FOOT1			FOOT2		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		
																		舞台下手奥へ切替可能					

DMX	81	T	DMX	82	R	DMX	83	S	DMX	84	T	DMX	85	R	DMX	86	S	DMX	87	T	DMX	88	R
2-5-1			2-5-2			2-5-3			2-5-4			2-5-5			2-5-6			2-5-7			2-5-8		
FOOT3			花F上1			花F上2			花F下1			花F下2			FC前1			FC前2			FC前3		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		
舞台下手奥へ切替			舞台上手奥へ切替可能						舞台下手奥へ切替可能						舞台上手へ切替可能			舞台下手へ切替					

DMX	89	S	DMX	90	T	DMX	91	R	DMX	92	S	DMX	93	T	DMX	94	R	DMX	95	S	DMX	96	T
2-6-1			2-6-2			2-6-3			2-6-4			2-6-5			2-6-6			2-6-7			2-6-8		
FC前4			FC上1			FC上2			FC上3			FC上4			FC上5			FC上6			FC下1		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		
																		舞台下手へ切替					

DMX	NO	Φ
ユニットNO		
負荷回路名		
ブレーカ-容量		

富士川町ますほ文化ホール

2010/4設備
TEL 0556-22-8811

NO3 調光器盤

DMX	97	R	DMX	98	S	DMX	99	T	DMX	100	R	DMX	101	S	DMX	102	T	DMX	103	R	DMX	104	S
3-1-1			3-1-2			3-1-3			3-1-4			3-1-5			3-1-6			3-1-7			3-1-8		
FC下2			FC下3			FC下4			FC下5			FC下6			FC上下1			FC上下2			FC上下3		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		

DMX	105	T	DMX	106	R	DMX	107	S	DMX	108	T	DMX	109	R	DMX	110	S	DMX	111	T	DMX	112	R
3-2-1			3-2-2			3-2-3			3-2-4			3-2-5			3-2-6			3-2-7			3-2-8		
FC上下4			FC上下5			FC上下6			FC上下7			FC上下8			FC上下9			LH上1			LH上2		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		

DMX	113	S	DMX	114	T	DMX	115	R	DMX	116	S	DMX	117	T	DMX	118	R	DMX	119	S	DMX	120	T
3-3-1			3-3-2			3-3-3			3-3-4			3-3-5			3-3-6			3-3-7			3-3-8		
LH上3			LH上4			LH下1			LH下2			LH下3			LH下4			1天反1			1天反2		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		

DMX	121	R	DMX	122	S	DMX	123	T	DMX	124	R	DMX	125	S	DMX	126	T	DMX	127	R	DMX	128	S
3-4-1			3-4-2			3-4-3			3-4-4			3-4-5			3-4-6			3-4-7			3-4-8		
1天反3			1天反4			2天反1			予備1			予備2			予備3			予備4			予備5		
100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A			100V30A		

DMX	129	T	DMX	130	R	DMX	131	S	DMX	132	T
3-5-1			3-5-2			3-5-3			3-5-4		
UH上1			UH上2			UH上3			UH上4		
100V60A			100V60A			100V60A			100V60A		

DMX	133	S	DMX	134	T	DMX	135	R	DMX	136	S
3-6-1			3-6-2			3-6-3			3-6-4		
UH下1			UH下2			UH下3			UH下4		
100V60A			100V60A			100V60A			100V60A		

DMX	NO	Φ
ユニットNO		
負荷回路名		
ブレーカ-容量		

富士川町ますほ文化ホール

2010/4設備
TEL 0556-22-8811

NO4 調光器盤

DMX	137	R	DMX	138	S	DMX	139	T	DMX	140	R	DMX	141	S	DMX	142	T	DMX	143	R	DMX	144	S
4-1-1			4-1-2			4-1-3			4-1-4			4-1-5			4-1-6			4-1-7			4-1-8		
客席1(最後列下手)			客席2(最後列上手)			客席3(後列下手)			客席4(後列上手)			客席5(前列下手)			客席6(前列上手)			客席7(前室)			客席8(親子室)		
100V20A			100V20A			100V20A			100V20A			100V20A			100V20A			100V20A			100V20A		

DMX	145	T	DMX	146	R	DMX	147	S	DMX	148	T	DMX			DMX			DMX			DMX		
4-1-9			4-1-10			4-1-11			4-1-12														
客席9(ブラケ上下)			客席10(ブラケ後)			客席11(ドンテラ下)			客席12(ドンテラ上)														
100V20A			100V20A			100V20A			100V20A														

可搬式調光ユニット DMX割り当て番号

DMX	149		DMX	150		DMX	151		DMX	152		DMX	153		DMX	154	
1-1		1-2		1-3		2-1		2-2		2-3							
MAX30A						MAX30A											

DMX	155		DMX	156		DMX	157		DMX	158		DMX	159		DMX	160	
3-1		3-2		3-3		4-1		4-2		4-3							
MAX30A						MAX30A											

DMX NO	負荷回路名			ユニット NO	ブレーカー／備考 容量
	R	S	T		
1	1B上下1			1-1-1	30A／作業灯
2		1B上下2		1-1-2	
3			1B上下3	1-1-3	
4	1B上下4			1-1-4	
5		1B中1		1-1-5	作業灯／強制直
6			1B中2	1-1-6	
7	1B中3			1-1-7	
8		1B中4		1-1-8	
9			2B上下1	1-2-1	作業灯
10	2B上下2			1-2-2	
11		2B上下3		1-2-3	
12			2B上下4	1-2-4	
13	2B中1			1-2-5	作業灯
14		2B中2		1-2-6	
15			2B中3	1-2-7	
16	2B中4			1-2-8	
17		1S1		1-3-1	
18			1S2	1-3-2	
19	1S3			1-3-3	
20		1S4		1-3-4	
21			1S5	1-3-5	
22	1S6			1-3-6	
23		1S7		1-3-7	
24			1S8	1-3-8	
25	1S9			1-4-1	
26		1S10		1-4-2	
27			1S11	1-4-3	
28	1S12			1-4-4	
29		2S1		1-4-5	
30			2S2	1-4-6	
31	2S3			1-4-7	
32		2S4		1-4-8	
33			2S5	1-5-1	
34	2S6			1-5-2	
35		2S7		1-5-3	
36			2S8	1-5-4	
37	2S9			1-5-5	
38		2S10		1-5-6	
39			2S11	1-5-7	
40	2S12			1-5-8	
41		3S1		1-6-1	
42			3S2	1-6-2	
43	3S3			1-6-3	
44		3S4		1-6-4	
45			3S5	1-6-5	
46	3S6			1-6-6	
47		3S7		1-6-7	
48			3S8	1-6-8	

DMX NO	負荷回路名			ユニット NO	ブレーカー／備考 容量
	R	S	T		
49	3S9			2-1-1	30A
50		3S10		2-1-2	
51			3S11	2-1-3	
52	3S12			2-1-4	
53		CL1		2-1-5	
54			CL2	2-1-6	
55	CL3			2-1-7	
56		CL4		2-1-8	
57			CL5	2-2-1	
58	CL6			2-2-2	
59		CL7		2-2-3	
60			CL8	2-2-4	
61	CL9			2-2-5	
62		CL10		2-2-6	
63			CL11	2-2-7	
64	CL12			2-2-8	
65		CL13		2-3-1	
66			CL14	2-3-2	
67	CL15			2-3-3	
68		CL16		2-3-4	
69			FS上1	2-3-5	
70	FS上2			2-3-6	
71		FS上3		2-3-7	
72			FS上4	2-3-8	
73	FS上5			2-4-1	
74		FST下1		2-4-2	
75			FS下2	2-4-3	
76	FST下3			2-4-4	
77		FST下4		2-4-5	
78			FS下5	2-4-6	
79	FOOT1			2-4-7	切替により舞台奥 下FCに変更可能 コンセントは30C
80		FOOT2		2-4-8	
81			FOOT3	2-5-1	
82	花F上1			2-5-2	切替により舞台奥 上下FCに変更可能 コンセントは30C
83		花F上2		2-5-3	
84			花F下1	2-5-4	
85	花F下2			2-5-5	
86		FC前1		2-5-6	切替により舞台奥 上下FCに変更可能 コンセントは30C
87			FC前2	2-5-7	
88	FC前3			2-5-8	
89		FC前4		2-6-1	
90			FC上1	2-6-2	
91	FC上2			2-6-3	
92		FC上3		2-6-4	
93			FC上4	2-6-5	
94	FC上5			2-6-6	
95		FC上6		2-6-7	
96			FC下1	2-6-8	

DMX NO	負荷回路名			ユニット NO	ブレイカー／備考 容量
	R	S	T		
137	客席1			4-1-1	20A／作業灯
138		客席2		4-1-2	20A／作業灯
139			客席3	4-1-3	20A／作業灯
140	客席4			4-1-4	20A／作業灯
141		客席5		4-1-5	20A／作業灯
142			客席6	4-1-6	20A／作業灯
143	客席7			4-1-7	サウンドロック／作業灯
144		客席8		4-1-8	親子室
145			客席9	4-1-9	ブラケット
146	客席10			4-1-10	
147		客席11		4-1-11	ドンテラ1
148			客席12	4-1-12	ドンテラ2
149		会場用に DMX割り 当て	ユニット未使用時DMX使用可能		可搬ユニット仕様 ユニット MAX30A3 C 1回路 MAX10 A2C
150	可搬 ユニット1				
151					
152					
153	可搬 ユニット2				
154					
155					
156	可搬 ユニット3				
157					
158					
159	可搬 ユニット4				
160					