

| | | |
|---------|----|---|
| DMX | NO | Φ |
| ユニットNO | | |
| 負荷回路名 | | |
| ブレーカー容量 | | |

富士川町ますほ文化ホール

2010/4設備
TEL 0556-22-8811

NO2 調光器盤

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|
| DMX | 49 | R | DMX | 50 | S | DMX | 51 | T | DMX | 52 | R | DMX | 53 | S | DMX | 54 | T | DMX | 55 | R | DMX | 56 | S |
| 2-1-1 | | | 2-1-2 | | | 2-1-3 | | | 2-1-4 | | | 2-1-5 | | | 2-1-6 | | | 2-1-7 | | | 2-1-8 | | |
| 3S9 | | | 3S10 | | | 3S11 | | | 3S12 | | | CL1 | | | CL2 | | | CL3 | | | CL4 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|
| DMX | 57 | T | DMX | 58 | R | DMX | 59 | S | DMX | 60 | T | DMX | 61 | R | DMX | 62 | S | DMX | 63 | T | DMX | 64 | R |
| 2-2-1 | | | 2-2-2 | | | 2-2-3 | | | 2-2-4 | | | 2-2-5 | | | 2-2-6 | | | 2-2-7 | | | 2-2-8 | | |
| CL5 | | | CL6 | | | CL7 | | | CL8 | | | CL9 | | | CL10 | | | CL11 | | | CL12 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|
| DMX | 65 | S | DMX | 66 | T | DMX | 67 | R | DMX | 68 | S | DMX | 69 | T | DMX | 70 | R | DMX | 71 | S | DMX | 72 | T |
| 2-3-1 | | | 2-3-2 | | | 2-3-3 | | | 2-3-4 | | | 2-3-5 | | | 2-3-6 | | | 2-3-7 | | | 2-3-8 | | |
| CL13 | | | CL14 | | | CL15 | | | CL16 | | | FS上1 | | | FS上2 | | | FS上3 | | | FS上4 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|------------|----|---|---------|----|---|
| DMX | 73 | R | DMX | 74 | S | DMX | 75 | T | DMX | 76 | R | DMX | 77 | S | DMX | 78 | T | DMX | 79 | R | DMX | 80 | S |
| 2-4-1 | | | 2-4-2 | | | 2-4-3 | | | 2-4-4 | | | 2-4-5 | | | 2-4-6 | | | 2-4-7 | | | 2-4-8 | | |
| FS上5 | | | FST下1 | | | FST下2 | | | FST下3 | | | FST下4 | | | FST下5 | | | FOOT1 | | | FOOT2 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |
| | | | | | | | | | | | | | | | | | | 舞台下手奥へ切替可能 | | | | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|----------|----|---|------------|----|---|---------|----|---|------------|----|---|---------|----|---|-----------|----|---|---------|----|---|---------|----|---|
| DMX | 81 | T | DMX | 82 | R | DMX | 83 | S | DMX | 84 | T | DMX | 85 | R | DMX | 86 | S | DMX | 87 | T | DMX | 88 | R |
| 2-5-1 | | | 2-5-2 | | | 2-5-3 | | | 2-5-4 | | | 2-5-5 | | | 2-5-6 | | | 2-5-7 | | | 2-5-8 | | |
| FOOT3 | | | 花F上1 | | | 花F上2 | | | 花F下1 | | | 花F下2 | | | FC前1 | | | FC前2 | | | FC前3 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |
| 舞台下手奥へ切替 | | | 舞台上手奥へ切替可能 | | | | | | 舞台下手奥へ切替可能 | | | | | | 舞台上手へ切替可能 | | | | | | 舞台下手へ切替 | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|---------|----|---|
| DMX | 89 | S | DMX | 90 | T | DMX | 91 | R | DMX | 92 | S | DMX | 93 | T | DMX | 94 | R | DMX | 95 | S | DMX | 96 | T |
| 2-6-1 | | | 2-6-2 | | | 2-6-3 | | | 2-6-4 | | | 2-6-5 | | | 2-6-6 | | | 2-6-7 | | | 2-6-8 | | |
| FC前4 | | | FC上1 | | | FC上2 | | | FC上3 | | | FC上4 | | | FC上5 | | | FC上6 | | | FC下1 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |
| 舞台下手へ切替 | | | | | | | | | | | | | | | | | | | | | | | |

| | | |
|---------|----|---|
| DMX | NO | Φ |
| ユニットNO | | |
| 負荷回路名 | | |
| ブレーカ-容量 | | |

富士川町ますほ文化ホール

2010/4設備
TEL 0556-22-8811

NO3 調光器盤

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|----|---|---------|----|---|---------|----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|
| DMX | 97 | R | DMX | 98 | S | DMX | 99 | T | DMX | 100 | R | DMX | 101 | S | DMX | 102 | T | DMX | 103 | R | DMX | 104 | S |
| 3-1-1 | | | 3-1-2 | | | 3-1-3 | | | 3-1-4 | | | 3-1-5 | | | 3-1-6 | | | 3-1-7 | | | 3-1-8 | | |
| FC下2 | | | FC下3 | | | FC下4 | | | FC下5 | | | FC下6 | | | FC上下1 | | | FC上下2 | | | FC上下3 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|
| DMX | 105 | T | DMX | 106 | R | DMX | 107 | S | DMX | 108 | T | DMX | 109 | R | DMX | 110 | S | DMX | 111 | T | DMX | 112 | R |
| 3-2-1 | | | 3-2-2 | | | 3-2-3 | | | 3-2-4 | | | 3-2-5 | | | 3-2-6 | | | 3-2-7 | | | 3-2-8 | | |
| FC上下4 | | | FC上下5 | | | FC上下6 | | | FC上下7 | | | FC上下8 | | | FC上下9 | | | LH上1 | | | LH上2 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|
| DMX | 113 | S | DMX | 114 | T | DMX | 115 | R | DMX | 116 | S | DMX | 117 | T | DMX | 118 | R | DMX | 119 | S | DMX | 120 | T |
| 3-3-1 | | | 3-3-2 | | | 3-3-3 | | | 3-3-4 | | | 3-3-5 | | | 3-3-6 | | | 3-3-7 | | | 3-3-8 | | |
| LH上3 | | | LH上4 | | | LH下1 | | | LH下2 | | | LH下3 | | | LH下4 | | | 1天反1 | | | 1天反2 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|
| DMX | 121 | R | DMX | 122 | S | DMX | 123 | T | DMX | 124 | R | DMX | 125 | S | DMX | 126 | T | DMX | 127 | R | DMX | 128 | S |
| 3-4-1 | | | 3-4-2 | | | 3-4-3 | | | 3-4-4 | | | 3-4-5 | | | 3-4-6 | | | 3-4-7 | | | 3-4-8 | | |
| 1天反3 | | | 1天反4 | | | 2天反1 | | | 予備1 | | | 予備2 | | | 予備3 | | | 予備4 | | | 予備5 | | |
| 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | | 100V30A | | |

| | | | | | | | | | | | |
|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|
| DMX | 129 | T | DMX | 130 | R | DMX | 131 | S | DMX | 132 | T |
| 3-5-1 | | | 3-5-2 | | | 3-5-3 | | | 3-5-4 | | |
| UH上1 | | | UH上2 | | | UH上3 | | | UH上4 | | |
| 100V60A | | | 100V60A | | | 100V60A | | | 100V60A | | |

| | | | | | | | | | | | |
|---------|-----|---|---------|-----|---|---------|-----|---|---------|-----|---|
| DMX | 133 | S | DMX | 134 | T | DMX | 135 | R | DMX | 136 | S |
| 3-6-1 | | | 3-6-2 | | | 3-6-3 | | | 3-6-4 | | |
| UH下1 | | | UH下2 | | | UH下3 | | | UH下4 | | |
| 100V60A | | | 100V60A | | | 100V60A | | | 100V60A | | |

| | | |
|---------|----|---|
| DMX | NO | Φ |
| ユニットNO | | |
| 負荷回路名 | | |
| ブレーカ-容量 | | |

富士川町ますほ文化ホール

2010/4設備
TEL 0556-22-8811

NO4 調光器盤

| | | | | | | | | | | | | | | | | | | | | | | | |
|------------|-----|---|------------|-----|---|-----------|-----|---|-----------|-----|---|-----------|-----|---|-----------|-----|---|---------|-----|---|----------|-----|---|
| DMX | 137 | R | DMX | 138 | S | DMX | 139 | T | DMX | 140 | R | DMX | 141 | S | DMX | 142 | T | DMX | 143 | R | DMX | 144 | S |
| 4-1-1 | | | 4-1-2 | | | 4-1-3 | | | 4-1-4 | | | 4-1-5 | | | 4-1-6 | | | 4-1-7 | | | 4-1-8 | | |
| 客席1(最後列下手) | | | 客席2(最後列上手) | | | 客席3(後列下手) | | | 客席4(後列上手) | | | 客席5(前列下手) | | | 客席6(前列上手) | | | 客席7(前室) | | | 客席8(親子室) | | |
| 100V20A | | | 100V20A | | | 100V20A | | | 100V20A | | | 100V20A | | | 100V20A | | | 100V20A | | | 100V20A | | |

| | | | | | | | | | | | | | | | | | | | | | | | |
|------------|-----|---|------------|-----|---|-------------|-----|---|-------------|-----|---|-----|--|--|-----|--|--|-----|--|--|-----|--|--|
| DMX | 145 | T | DMX | 146 | R | DMX | 147 | S | DMX | 148 | T | DMX | | | DMX | | | DMX | | | DMX | | |
| 4-1-9 | | | 4-1-10 | | | 4-1-11 | | | 4-1-12 | | | | | | | | | | | | | | |
| 客席9(ブラケ上下) | | | 客席10(ブラケ後) | | | 客席11(ドンテラ下) | | | 客席12(ドンテラ上) | | | | | | | | | | | | | | |
| 100V20A | | | 100V20A | | | 100V20A | | | 100V20A | | | | | | | | | | | | | | |

可搬式調光ユニット DMX割り当て番号

| | | | | | | | | | | | | | | | | | |
|--------|--|--|-----|--|--|--------|--|--|-----|--|--|-----|--|--|-----|--|--|
| DMX | | | DMX | | | DMX | | | DMX | | | DMX | | | DMX | | |
| 1-1 | | | 1-2 | | | 1-3 | | | 2-1 | | | 2-2 | | | 2-3 | | |
| | | | | | | | | | | | | | | | | | |
| MAX30A | | | | | | MAX30A | | | | | | | | | | | |

| | | | | | | | | | | | | | | | | | |
|--------|--|--|-----|--|--|--------|--|--|-----|--|--|-----|--|--|-----|--|--|
| DMX | | | DMX | | | DMX | | | DMX | | | DMX | | | DMX | | |
| 3-1 | | | 3-2 | | | 3-3 | | | 4-1 | | | 4-2 | | | 4-3 | | |
| | | | | | | | | | | | | | | | | | |
| MAX30A | | | | | | MAX30A | | | | | | | | | | | |